SEREL®

Washbasin + Spring Semi Pedestal Assembly Instructions

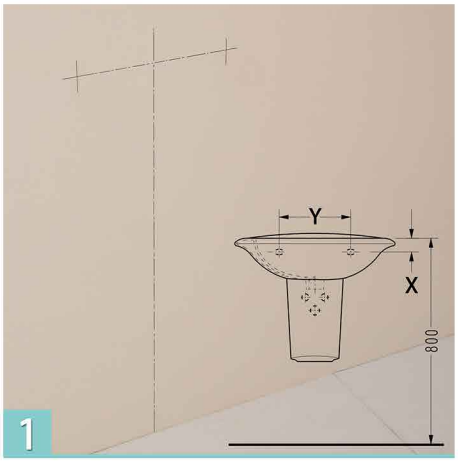

The front of the washbasin will be temporary set to 800 mm above the finished floor. Anchor holes it is marked taking into account the dimensions "X" and "Y".



Drill the holes.

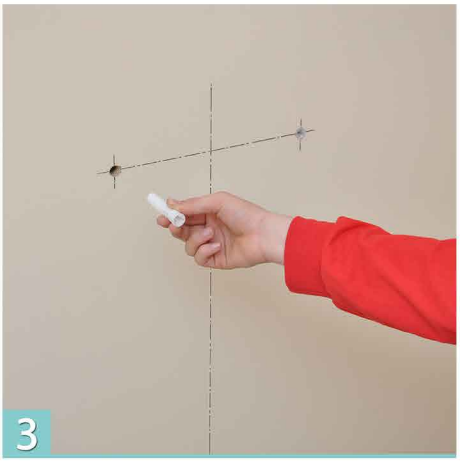

After drilling, plastic dowels are attached to the holes.

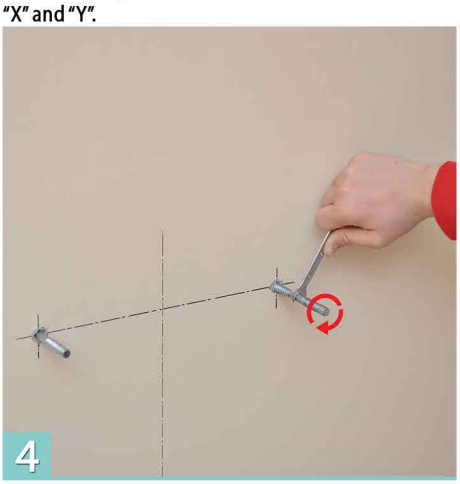

It is tightened by installing metal studs on plastic dowels.



The washbasin is placed on metal studs.



Washbasin mounting nuts are tightened by placing plastic bushings and washers.



The spring is attached to the appropriate hole on the auxiliary part. The spring semi pedestal mounting element is attached to the washbasin mounting stud as in the picture, tightening with a second nut.



The spring is pulled to the other end and attached to the hole on semi pedestal.



The assembly is completed. It is recommended to apply silicone to the wall-contact areas of the washbasin and semi pedestal.