SEREL

Washbasin Mounting Instructions

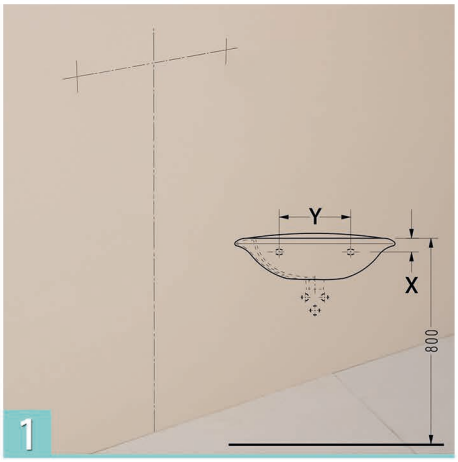

The front of the washbasin will be temporary set to 800 mm above the finished floor. Anchor holes it is marked taking into account the dimensions "X" and "Y".



Drill the holes.

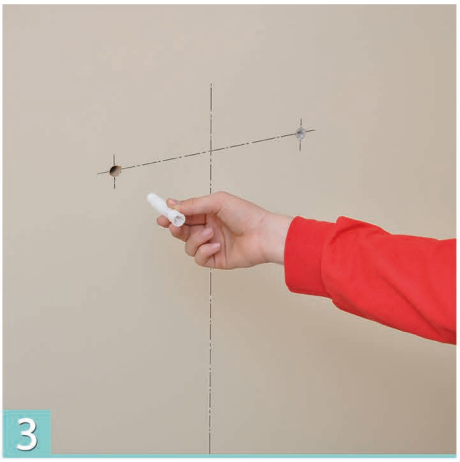

After drilling, plastic dowels are attached to the holes.

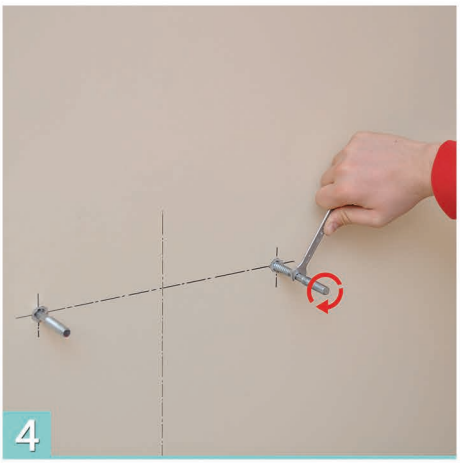

It is tightened by installing metal studs on plastic dowels.



The washbasin is placed on metal studs.



Washbasin mounting nuts are tightened by placing plastic bushings and washers.



The assembly is completed. It is recommended to apply silicone to the wall-contact areas of the washbasin.